



MESH HEAD REPLACEMENT

- 1: Remove all tension rods.
- 2: Slowly raise one side of the old mesh head.
- 3: Using your other hand, place a couple of fingers on the foam at the point where the pad foam adheres to the old mesh.
- 4: While holding the foam in place, slowly raise the old mesh head, making sure there is no tension being placed on the pad foam.
- 5: Install your new mesh head.